

Service Valve Attachment

Service Valves enable efficient purging of the hydronic coil/heat exchanger and provide access for descaling and maintenance.

- Follow labels on each valve for correct orientation
- Offset valves from Pod by at least 3" using appropriate plumbing to provide room for valve handles
 - Both large handles on the valves should be able to rotate into the positions shown.
 - The top valve is recommended to be angled at 45° for better access

